

Download the latest driver from FTDI or proceed if you already downloaded it.

Find the file ftdibus.inf in the downloaded driver files and open it with a text editor.

Find the lines:

```
[FtdiHw]
%USB\VID_0403&PID_6001.DeviceDesc%=FtdiBus.NT,USB\VID_0403&PID_6001
%USB\VID_0403&PID_6010&MI_00.DeviceDesc%=FtdiBus.NT,USB\VID_0403&PID_6010&MI_00
```

And insert a line as follows:

```
[FtdiHw]
%USB\VID_0403&PID_0000.DeviceDesc%=FtdiBus.NT,USB\VID_0403&PID_0000
%USB\VID_0403&PID_6001.DeviceDesc%=FtdiBus.NT,USB\VID_0403&PID_6001
%USB\VID_0403&PID_6010&MI_00.DeviceDesc%=FtdiBus.NT,USB\VID_0403&PID_6010&MI_00
```

Go further down until you find:

```
[FtdiHw.NTamd64]
%USB\VID_0403&PID_6001.DeviceDesc%=FtdiBus.NTamd64,USB\VID_0403&PID_6001
```

Insert line

```
[FtdiHw.NTamd64]
%USB\VID_0403&PID_0000.DeviceDesc%=FtdiBus.NTamd64,USB\VID_0403&PID_0000
%USB\VID_0403&PID_6001.DeviceDesc%=FtdiBus.NTamd64,USB\VID_0403&PID_6001
```

Again go down to:

```
[Strings]
Ftdi="FTDI"
DESC="CDM Driver Package - Bus/D2XX Driver"
DriversDisk="FTDI USB Drivers Disk"
USB\VID_0403&PID_6001.DeviceDesc="USB Serial Converter"
```

And insert line

```
[Strings]
Ftdi="FTDI"
DESC="CDM Driver Package - Bus/D2XX Driver"
DriversDisk="FTDI USB Drivers Disk"
USB\VID_0403&PID_0000.DeviceDesc="USB Serial Converter"
USB\VID_0403&PID_6001.DeviceDesc="USB Serial Converter"
```

Save the file

Now find file ftdiport.inf and open it for editing

Find the Following lines:

```
[FtdiHw]
%VID_0403&PID_6001.DeviceDesc%=FtdiPort.NT,FTDIBUS\COMPORT&VID_0403&PID_6001
```

Just like in ftdibus.inf insert a line as below.

```
[FtdiHw]
%VID_0403&PID_0000.DeviceDesc%=FtdiPort.NT,FTDIBUS\COMPORT&VID_0403&PID_0000
%VID_0403&PID_6001.DeviceDesc%=FtdiPort.NT,FTDIBUS\COMPORT&VID_0403&PID_6001
```

And further down find:

```
[FtdiHw.NTamd64]
%VID_0403&PID_6001.DeviceDesc%=FtdiPort.NTamd64,FTDIBUS\COMPORT&VID_0403&PID_6001
```

And insert line:

```
[FtdiHw.NTamd64]
%VID_0403&PID_0000.DeviceDesc%=FtdiPort.NTamd64,FTDIBUS\COMPORT&VID_0403&PID_0000
%VID_0403&PID_6001.DeviceDesc%=FtdiPort.NTamd64,FTDIBUS\COMPORT&VID_0403&PID_6001
```

And finally, near the bottom of the file find:

```
[Strings]
FTDI="FTDI"
DESC="CDM Driver Package - VCP Driver"
DriversDisk="FTDI USB Drivers Disk"
PortsClassName = "Ports (COM & LPT)"
VID_0403&PID_6001.DeviceDesc="USB Serial Port"
```

And add line

```
[Strings]
FTDI="FTDI"
DESC="CDM Driver Package - VCP Driver"
DriversDisk="FTDI USB Drivers Disk"
PortsClassName = "Ports (COM & LPT)"
VID_0403&PID_0000.DeviceDesc="USB Serial Port"
VID_0403&PID_6001.DeviceDesc="USB Serial Port"
```

Save the file and reinstall the drivers.

Let me know if this doesn't work.

Good Luck